


This screen has 3 tabs for the 3 different Report Types which use these additional settings.

You can either Save settings, or Get some previously Saved settings by clicking on these buttons. You will only Save or Open settings for one particular tab. That means if you save Seating Velocity settings, you are not saving Custom Duration or Checking Limits settings.

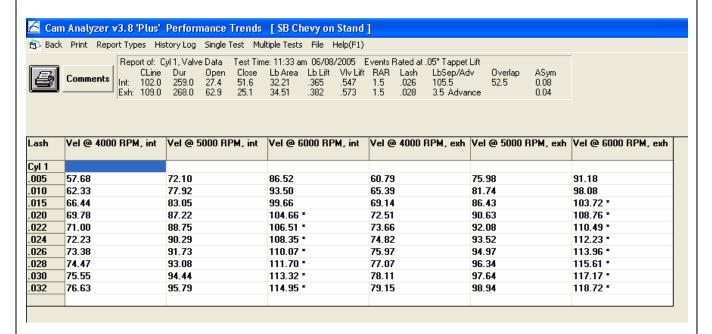

Check out Don Hubbard's book "Camshaft Reference Handbook" for lots of cam design suggestions. In it he talks about seating velocity and choosing an acceptable one for durability. The velocity in inches per second (or mm per second) changes with the engine RPM you are running. That is why you can enter up to 3 RPMs for checking. The Valve Lashes you enter are actual valve lash, and not tappet lifts. These valve lashes will change as you change the Rocker Arm Ratio setting in the Test/Cam Setup screen.